

2-PIECE LS VALVE COVERS – FOXBODY STYLE

241-185 – Natural Cast Finish 241-186 – Polished Finish 241-187 - Satin Black Finish

INSTRUCTION SHEET P/N 199R12218

PARTS LIST:


QUANTITY	DESCRIPTION	
2	2-Piece LS Valve Cover Baseplate, Foxbody Style	
2	2-Piece LS Foxbody Style Overcover	
10	Overcover Dress-Up Bolts –1/4"-20 Thread, 5/8" Long	
2	Low Profile Billet Oil Fill Cap w/ O-ring	
16	Gen I LS Coil Spacers	
16	Gen V LS Coil Spacers	
16	Coil Mounting Bolts - 1/4"-20 Thread, 1-1/4" Long	
1	Warranty Sheet	
1	Instruction Sheet	

RECOMMENDED TOOLS FOR INSTALLATION:

3/8" Drive Ratchet	Torque Wrench	Flat Head Screwdrivers
10mm - 3/8" Drive Socket	5/16" - 3/8" Drive Socket	8mm - 3/8" Drive Socket
(for Coil Mounting Bolts)	(for Overcover Bolts)	(for OE LS Valve Cover Bolts - Not Included)

APPLICATIONS:

Fits LS1, LS2, LS3, LS6, and LS7 engines. These valve covers feature integrated coil mounts that were designed specifically to fit Gen I and Gen V style LS coil bodies (OEM and some aftermarket).

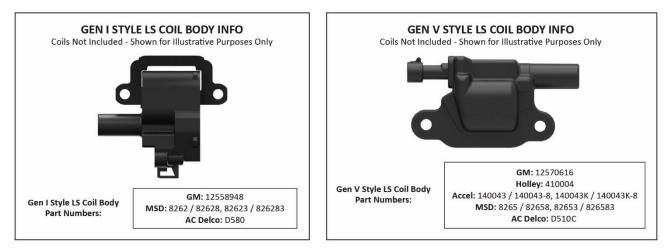

OPTIONAL PARTS:

These valve covers do not include valve cover mounting bolts or corresponding rubber grommets. You may re-use your factory bolt assemblies, or other factory height hardware of your choice, though replacements may be necessary over time.

Purchasing new valve cover gaskets is recommended, but not required.

Carefully inspect all components that will be reused before installation to determine if a replacement part may be necessary.


LS Valve Cover Gaskets (Set of 2): LS Valve Cover Bolt Grommets (Set of 8): Mr. Gasket Part # 61040G Fel-Pro® Part # ES72233

Figure 1 – Factory LS Valve Cover Hardware Assembly

NOTE: Aged grommets will likely tear during the removal and reinstallation processes. The area that is affected is only for temporary retention during installation and will not hurt the sealing function of the grommet.

INSTALLATION:

- Before beginning, blow any loose debris off the engine using an air hose. 1.
- Disconnect the battery. 2.
- 3. Remove any cosmetic engine/coil covers. Refer to the vehicle's service manual for proper removal procedure. If these covers mount to the original valve covers, they will not be reinstalled.
- Disconnect the spark plug wire from each coil by twisting and pulling on each wire boot. 4.
- Disconnect the main coil harness plug as shown in Figure 2 below. 5.

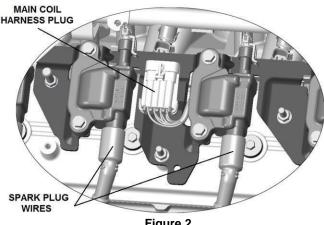


- Figure 2
- Remove the coils, coil brackets, coil harnesses, PCV hose, and existing valve covers from the vehicle. 6.
- 7. Remove the original LS valve cover gaskets by gently pulling them out of the valve cover grooves.
- Remove the valve cover retention bolt assemblies by carefully working the grommets out of the original valve covers. The 8. original grommets are likely to have softened and swelled with age.

- **NOTE:** If reusing the original grommets and gaskets, clean with only mild soap and hot water. Chemicals may damage the material and greatly affect their sealing ability.
- 9. Reinstall the gaskets by working them into the grooves in each Holley 2-piece LS valve cover baseplate. The gaskets will be slightly long as compared to the grooves and will need to be evenly worked around the cover distributing the extra length. Press firmly to properly seat the gasket.
- 10. Reinstall the factory LS valve cover retention bolts by carefully working each hardware assembly (bolt, spacer, and grommet) into each valve cover base until the grommet is fully seated against the surface of each hole.
- 11. Install each Holley 2-piece LS valve cover base onto the engine, making sure the gasket remains seated in the valve cover groove and the bolts are making contact with the threads in the cylinder head. Evenly torque each valve cover retention bolt to 106 in/lb (9 ft/lb).
- **NOTE:** The Holley 2-piece LS valve covers are designed to be used with rocker arms and lift ratios compatible with stock LS valve covers. If using aftermarket valve train components, refer to the manufacturer's instructions for compatibility.
- 12. Remove the corresponding rubber caps on the internally baffled ventilation tubes of your 2-piece LS valve cover baseplate(s) and reconnect the PCV/ventilation hose(s).
- **NOTE:** Some applications, as pictured below, have internal PCV restrictions inside the cover assembly. If your application utilizes this type of connection, an external PCV valve must be added in-line on the hose.



If required, a suggested PCV valve is: Beck/Arnley® P/N 143-0450299 or similar.

13. If applicable, remove the existing Gen I or Gen V coil bodies from the original brackets and install them onto the corresponding mounting posts on each Holley 2-piece LS valve cover base. Be sure to use the correct coil-specific spacers for your application and the included coil retention bolts. As shown in the diagram below, different mounting holes are used for Gen I and Gen V style LS coil bodies. Torque each coil retention bolt to **106 in/lb (9 ft/lb)**.

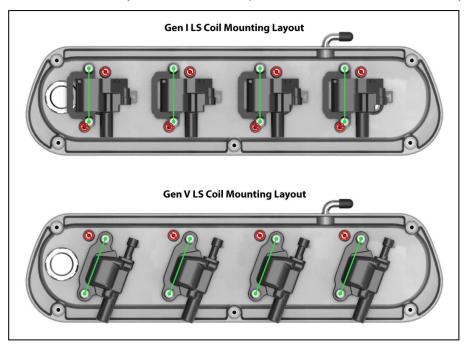


- 14. Remove the coil harnesses from any original brackets and/or plastic conduits. Reconnect the coil harnesses to the individual coils that were mounted onto each 2-piece LS valve cover base. Make sure the coil harnesses are not switched to the opposing sides and that each corresponds to the same coil that it was removed from if harnesses are accidentally switched, the firing order will be wrong. Neatly tuck the wires around the mounted coils and route the main harness so that it will fit through the slot in the valley side of the overcover once installed.
- 15. Install the 2-piece LS Foxbody style overcover using the supplied dress-up bolts and rubber grommets. When installing the overcover with Gen V LS coil bodies, first carefully slide the ends of the coils through the holes on the header side of the overcover, and then slightly rotate the overcover lengthwise to route it around the coil bodies and wiring harness. Be sure to check that the main coil harness clears the valley side exit hole and is not being pinched.
- 16. Reinstall the spark plug wires and rotate the boots for maximum exhaust clearance and visual appeal.
- 17. Make sure all electrical connections are secure and reconnect the battery.
- 18. Start the vehicle and verify that there are no oil leaks.

OIL FILL CAP INFO:

The low profile billet aluminum oil fill cap threads into each valve cover base and should be turned clockwise to install and counterclockwise to remove.

NOTE: It may be necessary to unbolt and remove the coil located directly over the low profile fill cap in order to unscrew, remove, and fill the oil. It may be possible to leave the coil in place, but it is recommended to remove during service to minimize the risk of getting oil on your coil or harness connectors.

NOTE: Oiling the low profile billet fill cap's O-ring (Figure 4) will ease the cap removal/reinstallation process and is recommended.

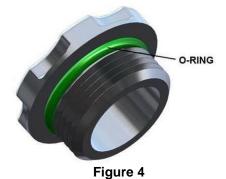

Holley Technical Support 1801 Russellville Road Bowling Green, KY 42101 270-781-9741 or 1-866-464-6553 www.holley.com

© 2020 Holley Performance Products. All Rights Reserved. Tous Droits Réservés.

199R12218 Date: 12-22-20